

59001

Installation Instructions

1. Turn off water supply.
2. Turn handle to on position.
3. Remove handle cap and retaining screw.
4. Remove handle by pulling straight out.
5. Remove handle adapter, limit stop and stop tube.
6. Remove clip. Use pliers to remove cartridge by pulling it out of faucet body.
7. Apply faucet grease to cartridge seals.
8. Replace cartridge and clip. Install cartridge in the on position with the seals positioned on the sides of the cartridge. Reassemble faucet in reverse order.
9. Turn on water supply. Check for leaks.

Tools needed for installation:

- Allen Wrench
- Adjustable Wrench
- Faucet Grease