


## 52004

### Installation Instructions

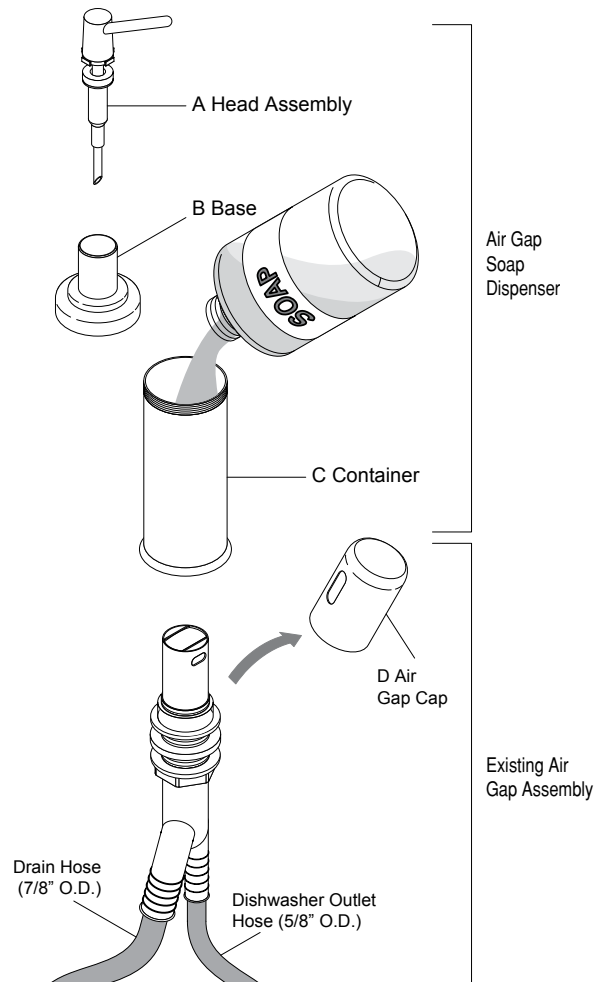

**Air Gap Soap Dispenser takes the place of an existing air gap cap, adding soap dispenser functionality to an air gap assembly. Does not include air gap assembly.**

1. Remove the cap (E) from existing air gap assembly.
2. Remove the base (B) and head assembly (A) from the air gap soap dispenser.
3. Pour soap into the container (C).
4. Screw the base (B) to the container (C).
5. Insert head assembly (A) into the base (B).
6. Unthread collar (D) from existing air gap assembly.
7. Screw the container (C) onto the air gap assembly.

**Tools needed for installation:** None