

## 54001

### Installation Instructions

(Read all instructions carefully  
before installing)

1. Turn off water supply, remove handle cap, retaining screw and handle.
2. Using wrench, remove old stem and replace with new stem. Hand tighten.
3. Using wrench, tighten new stem 1/4 turn. Do not overtighten.
4. Reassemble in reverse order.
5. Turn on water supply and check for leaks.

#### **Tools needed for installation:**

- Wrench
- Screwdriver

