


## 58002

### Installation Instructions

(Read all instructions carefully  
before installing)

1. Turn off water supply, remove handle cap, retaining screw and handle.
2. Using a wrench, remove old stem.
3. Using a seat wrench, remove worn seat.
4. Thread new seat into faucet and tighten with a seat wrench.
5. Install new stem and hand tighten.
6. Using wrench, tighten new stem 1/4 turn. Do not overtighten.
7. Reassemble in reverse order.
8. Turn on water supply and check for leaks.

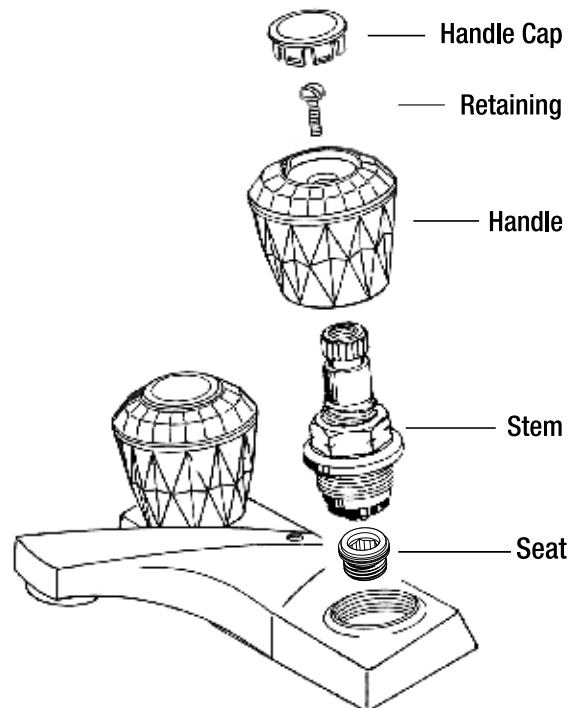

#### **Tools needed for installation:**

- Wrench
- Screwdriver