

58151

Installation Instructions

1. Turn off water supply.
2. Remove handle cap and retaining screw.
3. Remove handle by pulling straight out.
4. Install new handle and tighten with retaining screw.
5. Replace handle cap and turn on water supply. Check for leaks.

Tools needed for installation: • Screwdriver

