

## 58364

### Installation Instructions

1. Turn off water supply, and remove handle cap, retaining screw and handle.
2. Using wrench, remove faucet nut.
3. Remove old stem, seat and spring.
4. Replace with new stem, seat and spring. Hand-tighten faucet nut.
5. Using wrench, tighten faucet nut. Do not over-tighten.
6. Reassemble handle, retaining screw and handle cap in reverse order.

#### Tools needed for installation:

- Wrench
- Screwdriver

