

58391B

Installation Instructions

1. Turn off water supply.
2. Remove handle cap and retaining screw, and remove handle by pulling straight out.
3. Remove stop tube.
4. Remove existing spout o-ring(s), and install new o-ring(s).
5. Reassemble faucet in reverse order.
6. Turn on water and check for leaks.

Tools needed for installation:

- Adjustable Wrench
- Screwdriver

