

58396B

Installation Instructions

1. Turn off water supply.
2. Remove handle cap and retaining screw and remove old handle by pulling straight out.
3. Unthread and remove cap assembly.
4. Remove ball and cam assembly by pulling up on ball stem. Check seats and springs and replace if worn.
5. Replace worn ball. Make sure that slot in side of ball is inserted over pin inside body and that lug on side of cam is inserted into slot on side of body.
6. Reassemble faucet in reverse order. Tighten cap securely.
7. Turn on water supply. Check for leaks.

Tools needed for installation:

- Adjustable Wrench
- Screwdriver
- Allen Wrench

