

58398B

Installation Instructions

1. Turn off water supply.
2. Remove handle and cap assembly.
3. Remove ball and cam by pulling up on ball stem.
4. Remove existing seats and springs.
5. Install new springs and seats.
6. Reassemble faucet in reverse order. Make sure that lug on side of cam is inserted into slot on the side of the faucet body.
7. Turn on water and check for leaks.