

## 58409B

### Installation Instructions

1. Remove screw from tailpiece bracket.
2. Carefully remove tailpiece bracket and gasket.
3. Insert new gasket and tailpiece bracket.
4. Thread new screw through bracket and tighten.
5. Check for leaks.

**Tools needed for installation:** • Screwdriver

