

58478

Installation Instructions

1. Remove screw from overflow plate and retain.
2. Remove overflow plate and old gasket material.
3. Install new gasket and original overflow plate.
4. Reinstall screw and tighten with screwdriver.

Tools needed for installation: • Screwdriver

