

58479

Installation Instructions

1. Make sure basin is free of standing water.
2. Remove lock nut securing tailpiece to p-trap (F). Retain lock nut and washers for reassembly.
3. Remove tail extension (E) by unthreading (if present). Retain.
4. Loosen drain body (A) by unscrewing and removing locknut (D). Retain.
5. Remove friction ring (C) and retain.
6. Replace worn mack gasket (B) with 58479. Domed side should face bottom of sink for assembly.
7. Reassemble remaining parts.

Tools needed for installation: • Adjustable Wrench

