

58517B

Installation Instructions

1. Using adjustable wrench, remove existing shower head.
2. Remove debris from threads of shower arm and shower head using a soft cloth.
3. Wrap outside threads of Shower Flow Adjuster with thread sealing tape.
4. Carefully thread Shower Flow Adjuster into shower head. Tighten using adjustable wrench.
5. Wrap outside threads of shower arm with thread sealing tape.
6. Carefully thread Shower Flow Adjuster/shower head onto shower arm. Tighten using adjustable wrench.
7. Turn on shower to test for leaks.

Tools needed for installation: • Thread Sealing Tape

