

58537

Installation Instructions

1. Turn off water supply.
2. Using wrench, unscrew bonnet nut under the handle.
3. Unthread stem from valve body.
4. Remove worn washer and packing, and replace with new washer and packing.
5. Reassemble valve in reverse order.
6. Turn on water and check for leaks.

Tools needed for installation: • Adjustable Wrench