


## 58247

### Installation Instructions

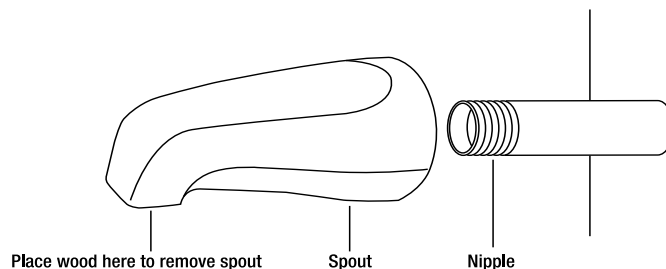

1. Remove old spout by placing a piece of wood in the spout and turning it counter clockwise.
2. Remove any pipe thread tape left on nipple sticking out of tub wall.
3. Wrap thread of nipple with pipe sealing tape, overlapping 1/2" width in the direction of thread.
4. Thread new spout onto nipple by turning it in a clockwise direction. When installing the spout onto the nipple, hand tighten only. If alignment cannot be completed by hand, use the wood tool as in step 1.

**Tools needed for installation:** • Piece of Wood • Pipe Thread Tape