


51114

Installation Instructions

For use in standard 3" diameter shower enclosure drains.
Does not fit with standard bathtub drains.

Fits with PartsmasterPro 51117 Replacement Baskets.

1. Remove old shower drain strainer or cover.
2. Snap Shower Drain Strainer Flange into drain opening.
3. Snap Cover onto Basket.
4. Insert Basket into drain opening.
5. To clean Basket:
 - a. Remove Basket by pulling up on Cover Handle.
 - b. Remove Cover from Basket.
 - c. Empty contents of Basket.
 - d. Replace Cover onto Basket, and reinsert Basket into drain opening.
6. Replace Basket as needed.

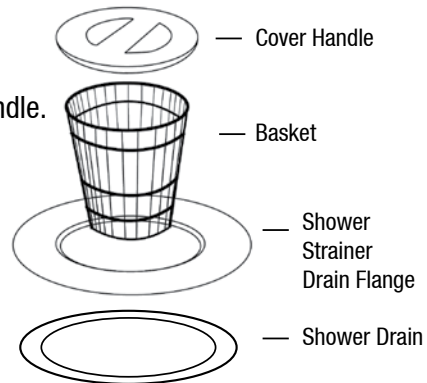

Tools needed for installation: • Screwdriver